


Hestia Pergola Heater

SKU: NV074-001
2024 v1.0

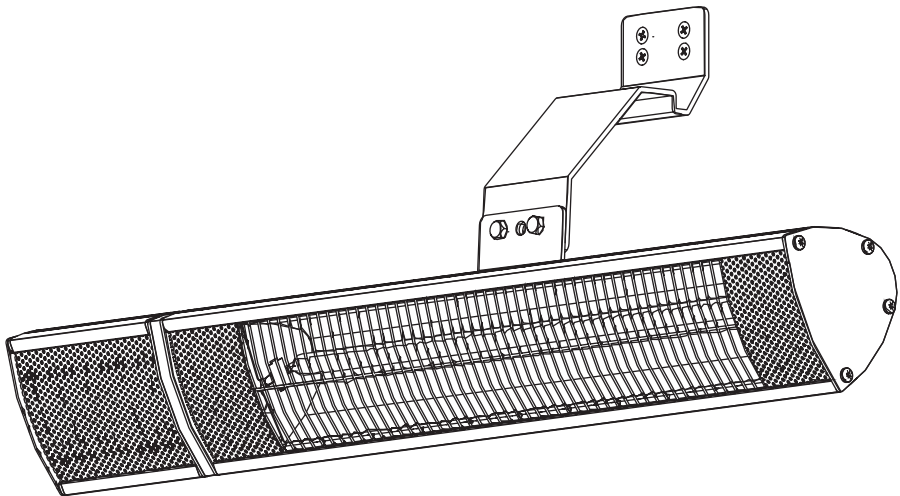


Assembly Instructions

IMPORTANT NOTICE

This booklet contains useful information about warranty & care instructions. Please keep for future reference.




Parts List

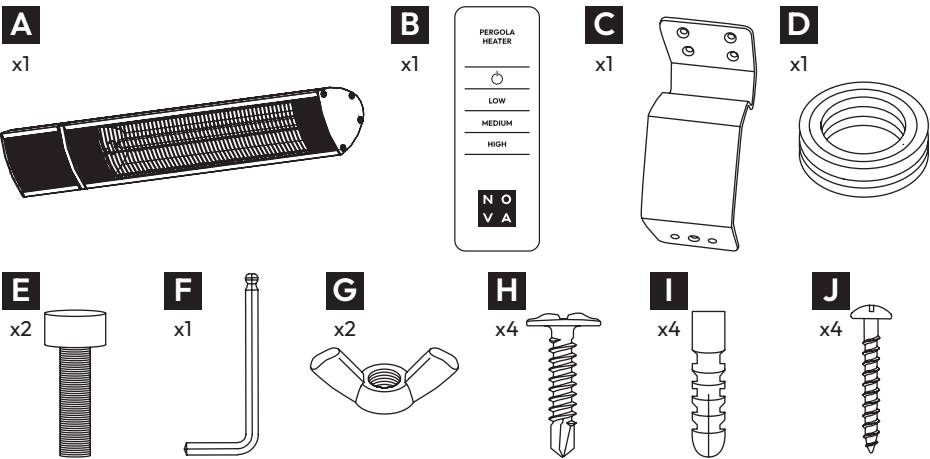

Parts List

Part	Qty	Part Name	Part	Qty	Part Name
A	1	Heater with 3m Lead	F	2	Hex Key
B	1	Remote Control	G	2	Butterfly Nut
C	1	Pergola Bracket	H	4	Self Tapping Screw
D	1	3m Lead with Plug	I	4	Rawl Plug
E	2	Hex Bolt	J	4	ST 4.8x35mm Screw

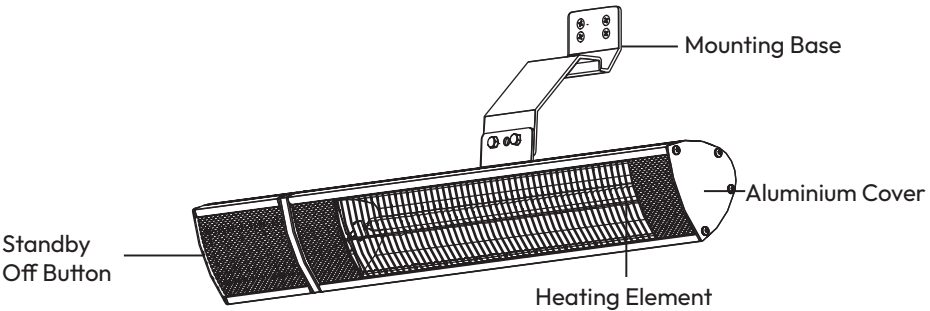



WARNING! It is essential to comply with the below instructions to avoid accidents and prevent damage to the machine.

- Keep out of reach from children and pets.
- Do not use this appliance in small / confined spaces where there are people with reduced physical, sensory or mental abilities who cannot leave the room by themselves unless constant supervision is provided.
- Do not use the appliance if the cord is frayed or if the appliance has been dropped or otherwise damaged.
- To avoid the risk of electric shock, do not attempt to repair the device yourself, contact a qualified technician for repair. Use only original spare parts.
- Do not cover or block the appliance with any object or items of clothing as there is a risk of overheating and fire!
- Never leave the appliance unattended for several hours and always switch off the appliance when you leave the operating area.
- Keep a sufficient safety distance of at least 1 metre from flammable objects such as furniture, curtains, papers, dry grass, bushes, etc.
- The appliance develops high temperatures during operation.
- The appliance is intended exclusively for private, domestic and outdoor use only.
- Use the appliance only in a grounded and properly installed outlet.
- Check the exterior walls for damage before installing the appliance onto the wall.
- Make sure the appliance is securely fixed to the Pergola or wall and do not use as a portable device.
- Do not place the appliance directly under an outlet.
- Keep the appliance away from heat sources, direct sunlight, moisture, bathtubs, showers, sinks, swimming pools or in any location where the heater can come into contact with water.
- Do not use the appliance in conjunction with a scheduler, timer or any appliance that can activate it automatically.
- Do not plug the appliance into an extension cord or power strip.
- Periodically check the appliance and the cable for any damage. The check must be carried out by a qualified technician.
- Do not use the appliance if it is cracked.
- Do not attempt to repair the appliance yourself. Always contact an authorised technician.
- Never attempt to open any part of the appliance or disassemble its control switches.
- Do not use the appliance in areas with a lot of dust, because dust can accumulate on the heating elements and cause the appliance to overheat.
- Never touch the appliance with wet or damp hands or feet or with any other source of electricity.
- Unplug the appliance from the power supply when installing, cleaning and/or replacing the lamp and make sure the lamp is cold.
- Unplug the appliance from the power supply when not in use. To disconnect the appliance, switch it off and remove the plug from the outlet. Do not remove the plug from the outlet by pulling on the power cord.
- The guard of this appliance is intended to prevent the risk of fire or injury from burns and no part of it must be permanently removed. The protective grill must not be removed or modified.
- When the appliance is not used for a long time, e.g. during the winter, it is recommended to keep it covered or stored in its original packaging. Make sure appliance is cool before storing.

Attaching The Heater To The Pergola


STEP 1

Decide the correct position of your heater. Either placed between the louvres or on the end beam. Make sure there is no obstruction to the opening or closing of the louvres once assembled.

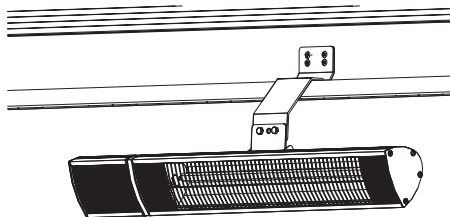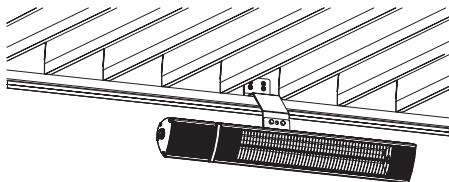


STEP 2

Secure the bracket to the Pergola using the 4x self-tapping screws.

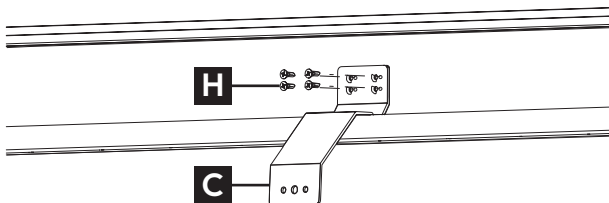

STEP 3

Secure the heater to the Pergola bracket using the 2x hex bolts, 2x butterfly nuts and hex key. Once assembled, connect the 3m lead with plug to the heater.

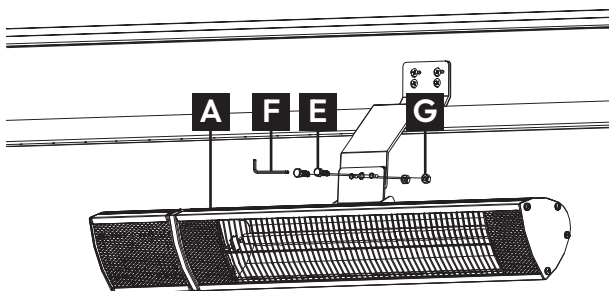

SAFETY WARNING!

Remove all packaging materials and keep out of the reach of infants and children.

Make sure that the power cord is well positioned and does not come into contact with the heater reflector or is not exposed in front of the area where the appliance emits heat.

Attaching The Heater To The Wall

STEP 1

Align the bracket level on the wall and mark the holes.

STEP 2

Use an M8 masonry drill bit to drill the 4 holes, then insert the rawl plugs.

STEP 3


Screw the bracket on the wall using ST 4.8x35mm screws, then attach the heater.

CORRECT INSTALLATION ON THE WALL

Do not place the appliance at an angle greater than 65° from the rear wall.


The appliance must be at a distance of at least 180cm from the ground and 50cm from the ceiling and 50cm from a side wall.

The appliance must only be placed in a horizontal position. It is forbidden to place it in a vertical position.

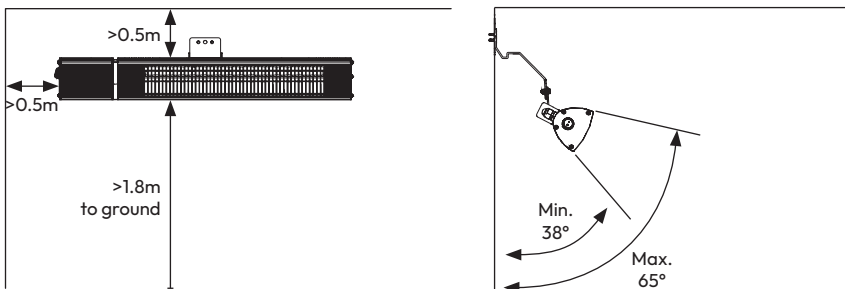


ADJUSTING THE ANGLE OF INCLINATION

To adjust the desired angle of inclination of the appliance, loosen the fixing screw, select the desired angle by following the instructions mentioned above and secure the appliance at that angle by screwing the fixing screw tightly.

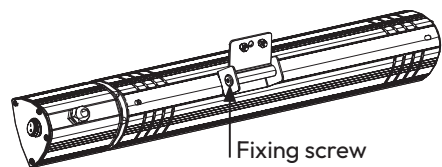

Using The Heater & Remote Control

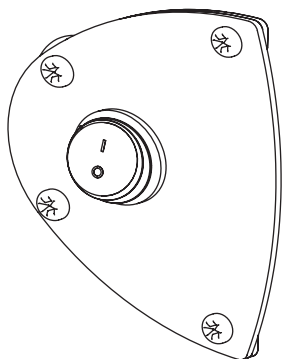

To activate the heater, follow the below steps:

Press the ON/OFF switch located on the side of the appliance to put the device into standby mode (a red indicator will start flashing on the appliance screen).

Press the ON/OFF button on the remote control.

Then select the desired power level by pressing the corresponding button on the remote control.


To turn off the heater, press the ON/OFF button on the remote control and the appliance will return to standby mode. To turn off the appliance completely, push the switch to the OFF position on the side of the appliance.

Always turn off the appliance by selecting the OFF position on the heater once you leave the workplace for safety.

Using the remote control:

- 2x AAA batteries required (not included).
- Different types of batteries or new and used batteries should not be used together.
- Remove the battery if the remote control is not used for a long time to avoid battery fluid leakage.

The appliance has 3 different power levels, as shown on the right.

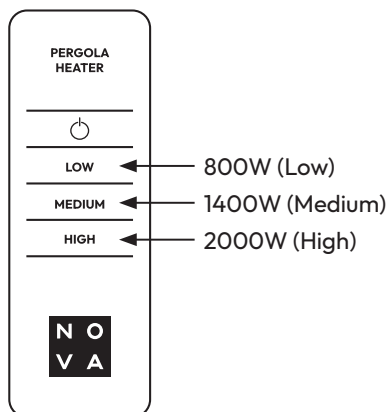

Cleaning & Maintenance

- Follow these instructions to properly and safely care for your appliance.
- Always disconnect the appliance from the power supply before cleaning or assembling it and always turn off the appliance by selecting the OFF position from the heater button.
- Do not submerge or pour water directly on the appliance. Risk of electric shock and fire.
- Do not allow water to drip onto or into the appliance.
- Clean the surface with a fresh and soft cloth.
- Do not use wire brushes or other sharp objects.
- Do not use harsh, abrasive or corrosive detergents or solvents to clean the appliance.

Storage

- Always turn off the appliance by selecting the OFF position from the heater button before cleaning, assembly or storage.
- Before storing the appliance, always disconnect the device from the power supply.
- Make sure the appliance is cold and dry before storing.
- Always store the appliance out of the reach of children.
- Always store the appliance in a safe and clean place. To best protect the appliance, store it in its original packaging.

Disposal of Appliance and Accessories



- This symbol appearing on the product, its accessories or accompanying manuals indicates- that the product and its electronic accessories should not be disposed of with other household trash.
- To avoid possible harmful effects on the environment or health due to uncontrolled waste disposal, please separate these products from other types of waste and recycle them.
- Household users should contact either the store where they purchased this product or their local services for details of where and how they can return these products for environmentally safe recycling.
- Disposal of Batteries
- The batteries should not be disposed of with other household waste at the end of their life cycle.

Warranty Information

We regret to inform you that warranty claims cannot be accepted without proof of purchase. Warranties are valid from the date of delivery to the original purchaser only. For us to help you, please ensure all warranty terms have been adhered to.

These terms can be found at <https://warranty.novaoutdoorliving.co.uk/>

The warranty applies to residential domestic use within the UK only. It does not cover commercial use, misuse, accidental damage, or normal wear and tear. We reserve the right to repair and/or replace parts rather than a complete item at our discretion.

